



Foglio istruzioni

Controllo elettronico MMIGRS



www.danfoss.com

CARATTERISTICHE GENERALI

MMIGRS è il dispositivo di interfaccia remota della famiglia MCX. Il display grafico di cui è dotato permette una completa personalizzazione dell'interfaccia utente. La connessione con un qualsiasi strumento della gamma MCX avviene attraverso la rete CANbus. Le informazioni sull'interfaccia utente risiedono a bordo del MCX e non è quindi necessaria alcuna programmazione del MMIGRS. MMIGRS si alimenta tramite lo strumento a cui è direttamente collegato e automaticamente ne mostra l'interfaccia utente; può però anche visualizzare l'interfaccia di un qualsiasi altro strumento connesso alla stessa rete.



MMIGRS

DATI TECNICI

- Alimentazione
 - da MCX attraverso connettore telefonico RJ11
 - 12 Vdc ± 20% alimentatore esterno
 - 12 Vac ± 15% alimentatore esterno
 - massima potenza assorbita: 1,5 W

INTERFACCIA UTENTE

- Display
 - grafico LCD blu trasmissivo
 - retroilluminazione a LED bianchi con intensità regolabile da software
 - risoluzione 128x64 punti
 - area visibile attiva 66,5x33,2 mm
 - contrasto regolabile da software
- Tastiera
 - 6 tasti di cui 3 con illuminazione LED rispettivamente verde, rossa, arancione e singolarmente comandabili da software
 - la funzione dei tasti è impostabile da software
- Montaggio
 - pannello (vedi dima di foratura in figura), utilizzando le viti incluse nella confezione
 - Indice di protezione: IP64 ~ NEMA3R

VARIE

- CANbus
- Seriale Modbus RS485
- Buzzer
- Orologio RTC
- Grado di protezione - IP64 ~ NEMA3R



CONNESSIONI

- Connettore CAN
- 6/6 vie tipo telefonico RJ11 plug

CODICE IDENTIFICATIVO PRODOTTO

CODICE	DESCRIZIONE
080G0174	MMIGRS, REMOTE DISPLAY, PANEL, CLOSE CONTROL

DIMENSIONI

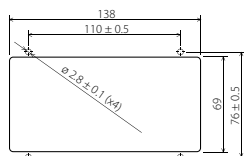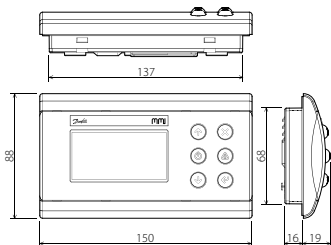


Dima di foratura

SCHEMA DI COLLEGAMENTO

Connessione MCX

Connessione MCX06

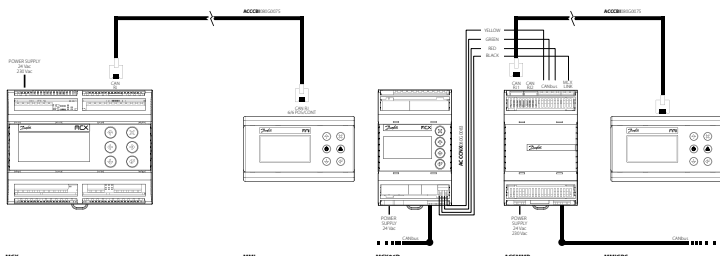

AVVERTENZE

CARATTERISTICHE CONTENITORE PLASTICO

- Autoestinguenza V0 secondo IEC 60695-11-10 e comportamento al filo incandescente 960 °C secondo IEC 60695-2-12
- Prova biglia: 125 °C secondo IEC 60730-1. Resistenza alle correnti superficiali: ≥ 250 V secondo IEC 60112

ALTRE CARATTERISTICHE

- Condizioni di funzionamento CE: -20T60 / UL: 0T55, 90% UR non condensante
- Condizioni di immagazzinamento: -30T80, 90% UR non condensante
- Da integrare in apparecchiature di classe I e/o II
- Grado di protezione: IP64 ~ NEMA3R sul solo frontale
- Periodo di sollecitazione elettriche delle parti isolanti: lungo
- Adatto per l'uso in ambiente di inquinazione normale
- Categoria di resistenza al calore e al fuoco: D
- Immunità contro le sovratensioni: categoria I
- Classe e struttura del software: A

CONFORMITÀ CE

Questo prodotto è progettato in modo da garantire la conformità con le seguenti direttive dell'Unione Europea:

- Direttiva bassa tensione: 73/23/EEC
- Compatibilità elettromagnetica EMC: 89/336/EEC e con le seguenti norme armonizzate:
 - EN61000-6-1, EN61000-6-3 (immunità ed emissione per gli ambienti residenziali, commerciali e dell'industria leggera)
 - EN61000-6-2, EN61000-6-4 (immunità ed emissione per gli ambienti industriali)
 - EN60730 (dispositivi elettrici automatici di comando per uso domestico e similare)

CONFORMITÀ UL

File UL: E31024

AVVERTENZE

- Ogni utilizzo diverso da quanto descritto nel presente manuale è da ritenersi improprio e non è pertanto autorizzato
- Verificare che le condizioni limite di funzionamento a cui l'apparecchiatura è sottoposta rientrino tra quelle specificate, in particolare per quanto riguarda la tensione di alimentazione e le condizioni ambientali
- Questa apparecchiatura contiene componenti elettrici sotto tensione e pertanto tutte le operazioni di servizio e manutenzione su di essa possono essere eseguite solo da personale qualificato
- L'apparecchiatura non può essere utilizzata come dispositivo di sicurezza
- La responsabilità di lesioni o danni causati da uso improprio ricadrà esclusivamente sull'utilizzatore

AVVERTENZE PER L'INSTALLAZIONE

- L'installazione deve essere eseguita secondo le normative e legislazioni vigenti nel paese di utilizzo dell'apparecchiatura
- Operare sui collegamenti elettrici sempre ad apparecchiatura non alimentata
- Prima di effettuare qualsiasi operazione di manutenzione sulla apparecchiatura, disinserire tutti i collegamenti elettrici
- Non esporre l'apparecchiatura sotto continui getti d'acqua o ad un umidità maggiore del 90%. In generale evitare l'esposizione ad atmosfere aggressive ed inquinanti, agli agenti atmosferici, ad ambienti ove sono presenti esplosivi o miscele di gas infiammabili, alla polvere, a forti vibrazioni, a repentine variazioni di temperatura che abbinate ad alta umidità possono provocare la formazione di condensa e a fonti di interferenze elettromagnetiche (ad es. antenne trasmettenti)
- Usare cavo appropriato per le linee di comunicazione. Fare riferimento alla Guida di Installazione Bus di Campo per il tipo di cavo da usare e le raccomandazioni da osservare nei collegamenti
- Ridurre il più possibile il percorso dei cavi dei sensori e degli ingressi digitali, allontanandoli dai cavi dei carichi induttivi e di potenza per evitare possibili disturbi elettromagnetici
- Non avvicinare le dita ai componenti elettronici dell'apparecchiatura per evitare la generazione di scariche elettrostatiche



SMALTIMENTO DEL PRODOTTO

- L'apparecchiatura (o il prodotto) deve essere oggetto di raccolta separata in conformità alle vigenti normative locali in materia di smaltimento.



Instruction sheet

Electronic controller MMIGRS



www.danfoss.com

GENERAL FEATURES

MMIGRS is MCX's family remote interface. It's fitted with a graphic display that allows a complete customization of the user interface. The connection with every unit of the MCX range is made through the CANbus network. All the information about the user interface is loaded inside the MCX controller; that's why there is no need of programming the MMIGRS interface. MMIGRS is powered from the controller which it is connected to and automatically shows its user interface; but it can also show the interface of any other device connect to the same network



MMIGRS

TECHNICAL SPEC.

- Power supply
 - from the MCX through the RJ11 telephone connector
 - 12 Vdc ± 20% external power supply
 - 12 Vac ± 15% external transformers
 - maximum power consumption: 1.5 W

USER INTERFACE

- Display
 - graphical LCD blue transmissive
 - white LED backlight with adjustable brightness via software
 - display format 1 28x64 dots
 - active visible area 66.5x33.2 mm
 - contrast adjustable via software
- Keyboard
 - 6 keys, 3 of them with respectively green, red, orange LEDs that can be individually managed via software
 - function key configurable by means the application software
- Mounting
 - panel (see the drilling template in figure), using the screws supplied in the packaging
 - index of protection: IP64 ~ NEMA3R

OTHERS

- CANbus
- Modbus RS485 serial interface
- Buzzer
- RTC clock
- Degree of protection - IP64 ~ NEMA3R


CONNECTIONS

- CAN connector
- 6/6 way telephone RJ11 plug type

PRODUCT PART NUMBER

CODE	DESCRIPTION
080G0174	MMIGRS, REMOTE DISPLAY, PANEL, CLOSE CONTROL

DIMENSIONS

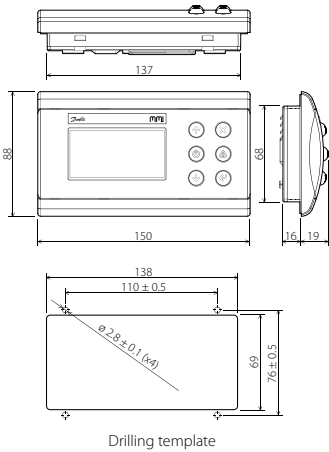

Drilling template

GENERAL FEATURES AND WARNINGS

PLASTIC HOUSING FEATURES

- Self extinguishing V0 according to IEC 60695-11-10 and glowing/hot wire test at 960 °C according to IEC 60695-2-12
- Ball test: 125 °C according to IEC 60730-1. Leakage current: ≥ 250V according to IEC 60112

OTHER FEATURES

- Operating conditions CE: -20T60 / UL: 0T55, 90% RH non-condensing
- Storage conditions: -30T80, 90% RH non-condensing
- To be integrated in Class I and/or II appliances
- Index of protection: IP64 ~ NEMA3R only on the front cover
- Period of electric stress across insulating parts: long
- Suitable for using in a normal pollution environment
- Category of resistance to heat and fire: D
- Immunity against voltage surges: category I
- Software class and structure: class A

CE COMPLIANCE

This product is designed to comply with the following EU standards:

- Low voltage guideline: 73/23/EEC
- Electromagnetic compatibility EMC: 89/336/EEC and with the following norms:
 - EN61000-6-1, EN61000-6-3 (immunity for residential, commercial and lighth-industrial environments)
 - EN61000-6-2, EN61000-6-4 (immunity and emission standard for industrial environments)
 - EN60730 (Automatic electrical controls for household and similar use)

UL APPROVAL

UL file: E31024


GENERAL WARNINGS

- Every use that is not described in this manual is considered incorrect and is not authorised by the manufacturer
- Verify that the installation and operating conditions of the device respect the ones specified in the manual, specially concerning the supply voltage and environmental conditions
- This device contains live electrical components therefore all the service and maintenance operations must be performed by qualified personnel
- The device can't be used as a safety device
- Liability for injury or damage caused by the incorrect use of the device lies solely with the user

INSTALLATION WARNINGS

- The installation must be executed according the local standards and legislations of the country
- Always operate on the electrical connections with the device disconnected from the main power supply
- Before carrying out any maintenance operations on the device, disconnect all the electrical connections
- Don't expose the device to continuous water sprays or to relative humidity greater than 90%. Avoid exposure to corrosive or pollutant gases, natural elements, environments where explosives or mixes of flammable gases are present, dust, strong vibrations or chock, large and rapid fluctuations in ambient temperature that in combination with high humidity can condensate, strong magnetic and/or radio interference (e.g. transmitting antennae)
- Use appropriate data communication cables. Refer to the Fieldbus Installation Guide for the kind of cable to be used and setup recommendations
- Reduce the path of the probe and digital inputs cables as much as possible, and avoid spiral paths enclosing power devices. Separate from inductive loads and power cables to avoid possible electromagnetic noises
- Avoid touching or nearly touching the electronic components fitted on the board to avoid electrostatic discharges

CONNECTION DIAGRAM

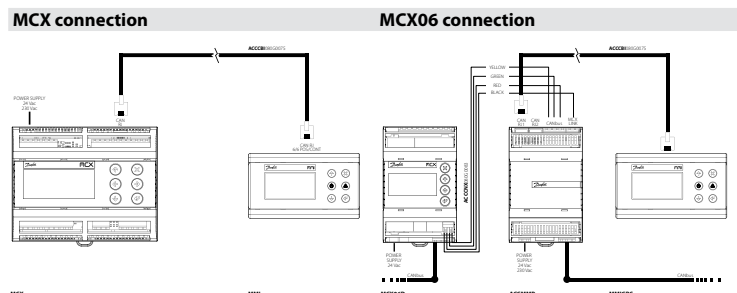

DISPOSAL INSTRUCTION

- Equipment containing electrical components may not be disposed together with domestic waste. It must be separately collected with electrical and electronic waste according to local and valid legislation.